

GESTRA Steam Systems

NRR 2-52

NRR 2-53

URB 50

EN

English

Installation & Operating Instructions **819222-02**

Level Controller NRR 2-52

Level Controller NRR 2-53

Operating & Display Unit URB 50

Contents

Page

Important notes

Usage for the intended purpose.....	5
Function.....	5
Safety note.....	6

Directives and standards

VdTÜV Bulletin "Wasserstand 100" (= Water Level 100).....	6
LV (Low Voltage) Directive and EMC (Electromagnetic Compatibility).....	6
ATEX (Atmosphère Explosible)	6
Note on the Declaration of Conformity / Declaration by the Manufacturer CE	6

Technical data

NRR 2-52, NRR 2-53.....	7
URB 50	8
Scope of supply	9

In control cabinet: Mounting level controller

Dimensions NRR 2-52, NRR 2-53.....	10
Key	10
Installation in control cabinet.....	10
Name plate / marking	11

In control cabinet: Installing the operating & display unit

Dimensions URB 50	12
Key	12
Installation in control cabinet.....	12
Name plate / marking	12

In control cabinet: Wiring level controller

Wiring diagram for level controller NRR 2-52.....	13
Key	13
Wiring diagram for level controller NRR 2-53.....	14
Key	14

In control cabinet: Wiring the operating & display unit

Back of equipment, position of connector.....	15
Connection of supply voltage.....	15
Pin assignment for data line NRR 2-52, NRR 2-53 - URB 50	15
Key	15

In control cabinet: Wiring the level controller / the operating & display unit

Connection of supply voltage.....	16
Connecting output contacts.....	16
Connecting level electrode, level transmitter	16
Connection of data line for the level controller / operating & display unit	16
Connecting the potentiometer (for indication of valve positions), connections IN ../ OUT / 4-20 mA.....	16

**In the plant:
Wiring level electrode / level transmitter**

Connecting level electrode, level transmitter	17
---	----

Level controller: Factory settings

Level controller NRR 2-52, NRR 2-53	17
---	----

Level controller: Changing factory settings

Changing function and input for level electrode/transmitter	18
Tools	19

Before putting the level control system into operation

Establishing measuring range	20
------------------------------------	----

Operating & display unit URB 50

User interface	21
Key	21
Switch on supply voltage.....	21
Explanation of icons	22

Commissioning procedure

Adjusting the MIN/MAX switchpoints and setpoint	24
Numberpad	24
Key	24
Establishing measuring range for level electrode NRG 2.-.....	25
Setting the control parameters	26
Additional information on control parameter settings.....	26
Key	26
Setting the control parameters for 3-element control (optional)	27
Key	27
Only NRR 2-52: Calibrating the potentiometer for indication of valve position	28

Contents - continued -

Page

Operation

Manual actuation of control valve	28
Trending.....	29
Key	29
Testing MIN/MAX alarm, entering date and time	30
Setting up a password and logging in	31
Key	31
Log out	33
Alarm & malfunction list.....	34
Key	34

Error, alarm and warning messages

Indication, diagnosis and remedy	35
--	----

Further Notes

Action against high frequency interference.....	36
Decommissioning / replacing the level controller NRR 2-5.....	36
Decommissioning / replacing the operating & display unit URB 50	36
Disposal.....	36

Important notes

Usage for the intended purpose

The functional unit consisting of the operating & display unit URB 50 and the level controller NRR 2-52 / NRR 2-53 in conjunction with level electrodes NRG 2-.. or level transmitter NRG 26-1 is used as water level controller and as limit switch, for instance in steam boilers, (pressurized) hot-water installations as well as condensate and feedwater tanks.

The functional unit consisting of the URB 50 and the level controller NRR 2-5.. is designed for use with level electrodes NRG 21-.. or NRG 26-21 as well as level transmitter NRG 26-1.

Function

The **operating & display unit URB 50** and the **level controller NRR 2-52, NRR 2-53** form a functional unit featuring the following properties:

Level Controller	NRR 2-52	NRR 2-53
Evaluation of the voltage signal of the level electrode NRG 2-.. and standardized measuring range	X	X
Evaluation of current signal of level transmitter NRG 26-1	X	X
3-position stepping controller with proportional-plus-integral control action (PI controller) and control of an electrically actuated control valve	X	
Continuous controller as PI controller for the control of an electro-pneumatically operated control valve		X
Indication of MIN / MAX water level limit	X	X
Current inputs for steam and feedwater flowrate (3-element control) (optional)	X	X
Indication of valve position if control valve is provided with a potentiometer	X	
Actual value output 4-20 mA (optional)	X	X
Operating & display unit	URB 50	
Indication of actual value (indicated in percent and as bar graph)	X	
Indication of valve position (indicated in percent and as bar graph)	X	
Standardized measuring range if level electrode NRG 2-.. is connected	X	
Indication/adjustment of control parameters	X	
Standardization and evaluation of current inputs for steam and feedwater flowrate (3-element control) (optional)	X	
Trend record	X	
Indication and listing of errors, alarms and warnings	X	
Test of MIN / MAX output relays	X	
Manual/automatic operation	X	
Password protection	X	

Important Notes - continued -

Safety note

The equipment must only be installed, wired and commissioned by qualified and competent staff. Retrofitting and maintenance work must only be performed by qualified staff who - through adequate training - have achieved a recognised level of competence.



Danger

The terminal strips of the equipment are live during operation. This presents the danger of electric shock!

Always cut off power supply to the equipment before mounting, removing or connecting the terminal strips!



Attention

The name plate specifies the technical features of the equipment. Note that any piece of equipment without its specific name plate must neither be commissioned nor operated.

Directives and standards

VdTÜV Bulletin "Wasserstand 100" (= Water Level 100)

The functional unit consisting of the operating & display unit URB 50 / level controller NRR 2-52, NRR 2-53 in conjunction with level electrode NRG 2-.. and level transmitter NRGT 26-.. is type approved according to VdTÜV Bulletin "Wasserüberwachung (= Water Monitoring) 100".

The VdTÜV Bulletin "Wasserstand (= Water Level) 100" specifies the requirements made on water level control and limiting equipment for boilers.

LV (Low Voltage) Directive and EMC (Electromagnetic Compatibility)

The equipment meets the requirements of the Low Voltage Directive 2006/95/EC and the EMC Directive 2004/108/EC.

ATEX (Atmosphère Explosible)

According to the European Directive 94/9/EC the equipment must **not** be used in explosion risk areas.

Note on the Declaration of Conformity / Declaration by the Manufacturer **CE**

For details on the conformity of our equipment according to the European Directives see our Declaration of Conformity or our Declaration of Manufacturer.

The current Declaration of Conformity / Declaration of Manufacturer are available in the Internet under www.gestra.com/documents or can be requested from us.

Technical data

NRR 2-52, NRR 2-53

Supply voltage

24 VDC +/- 20%

Fuse

external 0.5 A (semi-delay)

Power consumption

5 VA

Connection of level electrode / level transmitter (switch-selectable)

1 input for level electrode NRG 21-.. or NRG 26-21, with 3 poles and screen or

1 analogue input 4-20 mA, e. g. for level transmitter NRG 26-1, with 2 poles and screen

Supply voltage of level electrode

12 VDC

Input/output

Interface for data exchange with operating & display unit URB 50

Inputs

1 analogue input potentiometer 0 - 1000 Ω , two-wire connection

(indication of valve position, only NRR 2-52)

1 analogue input 4-20 mA (steam flowrate) (optional)

1 analogue input 4-20 mA (feedwater flowrate) (optional)

Outputs

NRR 2-52: 2 volt-free change-over contacts,

8 A 250 V AC / 30 V DC $\cos \varphi = 1$ (control valve).

2 volt-free change-over contacts,

8 A 250 V AC / 30 V DC $\cos \varphi = 1$,

De-energizing delay: 3 seconds (MIN/MAX alarm).

NRR 2-53: 4 volt-free change-over contacts, 8 A 250 V AC / 30 V DC $\cos \varphi = 1$,

De-energizing delay: 3 seconds (MIN 1, MIN 2 / MAX 1, MAX 2 alarm)

1 analogue output 4-20 mA, max. load 500 ohm (manipulated variable Y).

Provide inductive loads with RC combinations according to manufacturer's specification to ensure interference suppression

NRR 2-52, NRR 2-53: 1 analogue output 4-20 mA, max. load 500 ohm (e. g. for actual value indication) (optional)

Indicators and adjustors

1 tri-colour LED indicator (start-up = amber, power ON = green, malfunction = red)

1 code switch with four poles for configuration

Housing

Housing material: base: polycarbonate, black; front: polycarbonate, grey

Conductor size: 1 x 4,0 mm² solid per wire or

1 x 2.5 mm² per stranded wire with sleeve to DIN 46228 or

2 x 1.5 mm² per stranded wire with sleeve to DIN 46228 (min. \varnothing 0.1 mm)

terminal strips can be detached separately

Fixing of housing: Mounting clip on supporting rail TH 35, EN 60715

Electrical safety

Pollution degree 2 for installation in control cabinet with protection IP 54, completely insulated

Protection

Housing: IP 40 to EN 60529

Terminal strip: IP 20 to EN 60529

Technical data - continued -

NRR 2-52, NRR 2-53 - continued -

Weight

approx. 0.5 kg

Ambient temperature

when system is switched on: 0° ... 55 °C,

during operation: -10 ... 55°C,

Transport temperature

-20 ... +80 °C (<100 hours), defrosting time of the de-energized equipment before it can be put into operation: 24 hours.

Storage temperature

-20 ... +70 °C, defrosting time of the de-energized equipment before it can be put into operation: 24 hours.

Relative humidity

max. 95%, no moisture condensation

Approvals:

TÜV certificate

VdTÜV Bulletin "Water Level 100" (= Water Level 100):

Requirements made on water level limiting & control equipment.

Type approval no. TÜV · WR · XX-427

(see name plate).

URB 50

Supply voltage

24 VDC +/- 20%

Fuse

internal automatic

Power consumption

8 VA

Input / output

Interface for data exchange with level controller NRR 2-52, NRR 2-53.

User interface

Analogue resistive touch screen, resolution 480 x 271 pixels, illuminated.

Dimensions

Front panel: 147x107 mm

Panel cut-out: 136x96 mm

Depth: 56 + 4 mm

Electrical connection

1 connector with 3 poles,

1 D-SUB connector with 9 poles.

Protection

Front panel: IP 65 to EN 60529

Back: IP 20 to EN 60529

Weight

approx. 1.0 kg

Technical data - continued -

URB 50 - continued -

Ambient temperature

when system is switched on: 0 ° ... 55 °C,
during operation: -10 ... 55 °C

Transport temperature

-20 ... +80 °C (<100 hours), defrosting time of the de-energized equipment before it can be put into operation: 24 hours.

Storage temperature

-20 ... +70 °C, defrosting time of the de-energized equipment before it can be put into operation: 24 hours.

Relative humidity

5 - 85 %, no moisture condensation

Scope of supply

NRR 2-52

1 Level controller NRR 2-52
1 Installation manual

NRR 2-53

1 Level controller NRR 2-53
1 Installation manual

URB 50

1 Operating & display unit URB 50
1 Data line L = 5 m

In control cabinet: Mounting level controller

Dimensions NRR 2-52, NRR 2-53

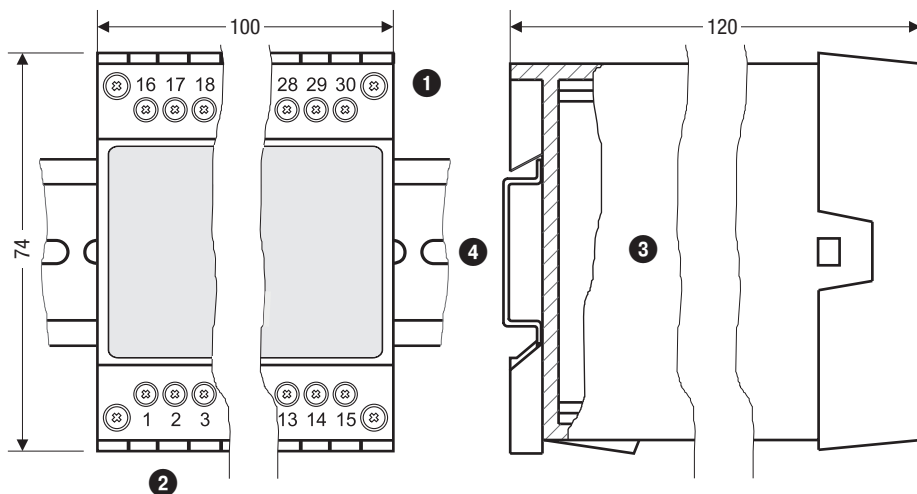


Fig. 1

Key

- | | |
|------------------------|--|
| 1 Upper terminal strip | 3 Housing |
| 2 Lower terminal strip | 4 Supporting rail type TH 35, EN 60715 |

Installation in control cabinet

The level controller NRR 2-52, NRR 2-53 is clipped onto the support rail type TH 35, EN 60715 in the control cabinet. **Fig. 1**

In control cabinet: Mounting level controller - continued -

Name plate / marking

Name plate NRR 2-52

Safety note		Betriebsanleitung beachten	Niveauregler Level Controller Régulateur de niveau		NRR 2 - 52		Type designation
		See installation instructions Voir instructions de montage	24 V = + / - 20%	5 VA	IP 40 (IP20)		Supply voltage
			Tamb = 55 °C (1 31 °F)		TÜV.WR. 12-427		Power consumption
							Protection
					250 V ~ T 2,5 A		Type approval no.
							External fuse for output contacts
Fuse, provided on site							Ambient temperature
							Connecting level electrode, level transmitter
							Disposal note
Manufacturer	GESTRA AG Münchener Str. 77 D-28215 Bremen		Serial number				

Name plate NRR 2-53

Safety note		Betriebsanleitung beachten	Niveauregler Level Controller Régulateur de niveau		NRR 2 - 53		Type designation
		See installation instructions Voir instructions de montage	24 V = + / - 20%	5 VA	IP 40 (IP20)		Supply voltage
			Tamb = 55 °C (1 31 °F)		TÜV.WR. 12-427		Power consumption
							Protection
					250 V ~ T 2,5 A		Type approval no.
							External fuse for output contacts
Fuse, provided on site							Ambient temperature
							Connection of level electrode, level transmitter
							Disposal note
Manufacturer	GESTRA AG Münchener Str. 77 D-28215 Bremen		Serial number				

Fig. 2

In control cabinet: Installing the operating & display unit

Dimensions URB 50

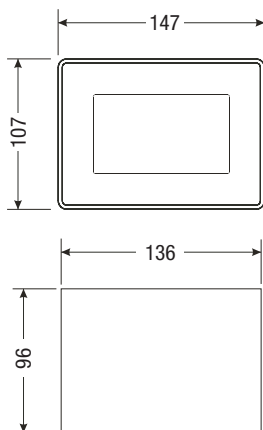


Fig. 3

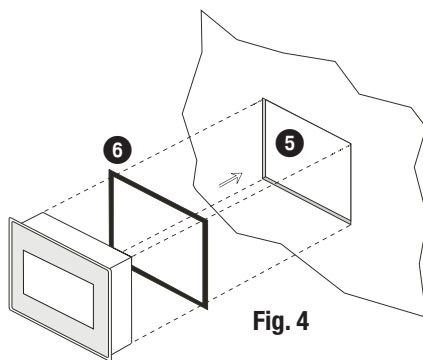



Fig. 4

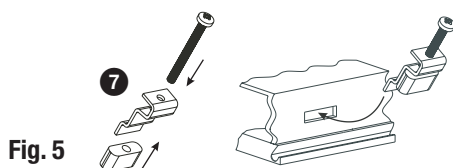


Fig. 5

Key

- 5 Cut-out in control cabinet 136x96 mm
- 6 Gasket
- 7 Fixing elements

Installation in control cabinet

- Provide a control panel cut-out with the dimensions indicated in **Fig. 3 and 4**.
- Insert the operating & display unit into the control panel cut-out. Make sure the gasket **6** is properly seated.
- Insert and fasten the screws **Fig. 5** until the edges of the frame are flush with the panel of the control cabinet.

Name plate / marking



Fig. 6

In control cabinet: Wiring level controller

Wiring diagram for level controller NRR 2-52

NRR 2-52 MIN Closed Open MAX

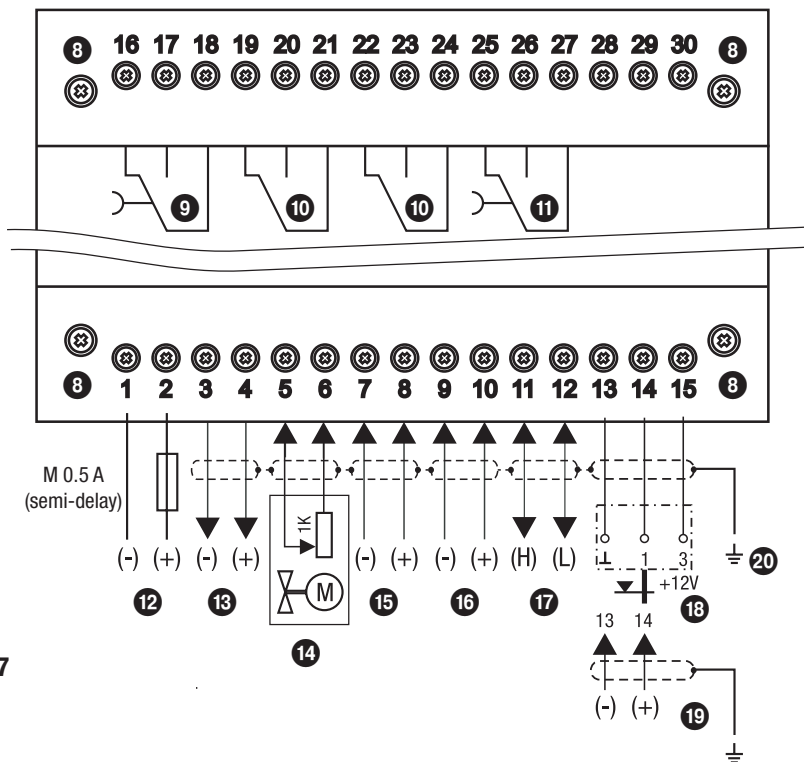


Fig. 7

Key

- 8 Fixing screws for terminal strip
- 9 MIN output contact, de-energizing delay: 3 sec.
- 10 Output contacts for activating the control valve
- 11 MAX output contact, de-energizing delay: 3 sec.
- 12 Connection of supply voltage 24 V DC with fuse 0.5 A (semi-delay) provided on site
- 13 Actual value output 4-20 mA (optional)
- 14 Indication of valve position, potentiometer 0 - 1000 Ω
- 15 IN 2 / 4-20 mA for feedwater flowrate (optional)
- 16 IN 3 / 4-20 mA for steam flowrate (optional)
- 17 Data line for operating & display unit URB 50
- 18 Level electrode NRG 21... NRG 26-21
- 19 Level transmitter NRG 26-1, 4-20 mA, with earthing point.
- 20 Central earthing point (CEP) in control cabinet

In control cabinet: Wiring level controller - continued -

Wiring diagram for level controller NRR 2-53

NRR 2-53

MIN

MAX

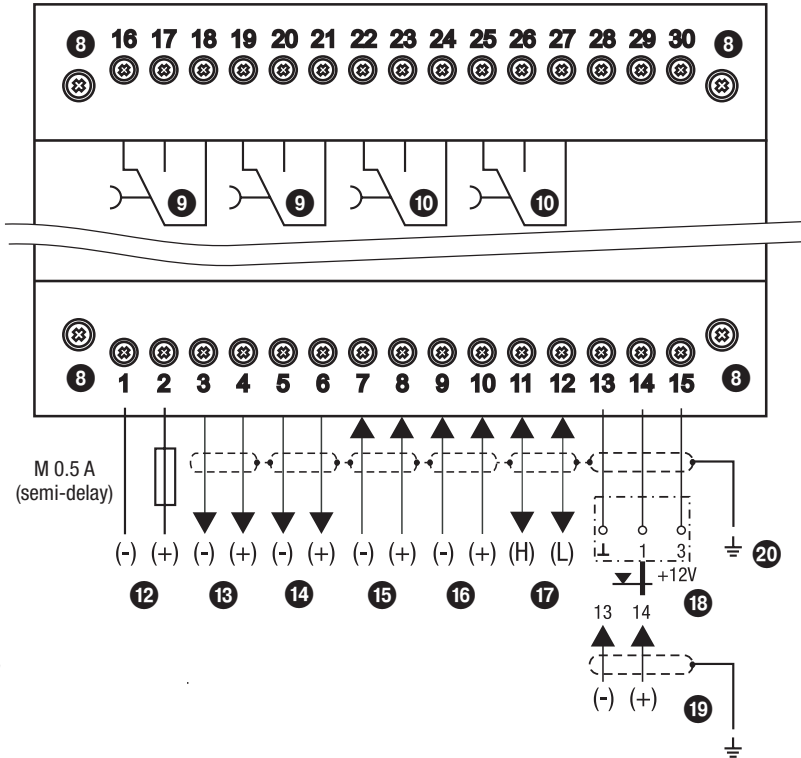


Fig. 8

Key

- | | | | |
|----|---|----|--|
| 8 | Fixing screws for terminal strip | 14 | Output 4-20 mA manipulated variable Y |
| 9 | MIN output contacts 1 and 2
De-energizing delay: 3 sec. | 15 | IN 2 / 4-20 mA for feedwater flowrate (optional) |
| 10 | MAX output contacts 1 and 2
De-energizing delay: 3 sec. | 16 | IN 3 / 4-20 mA for steam flowrate (optional) |
| 12 | Connection of supply voltage 24 V DC with
fuse 0.5 A (semi-delay) provided on site | 17 | Data line for operating & display unit URB 50 |
| 13 | Actual value output 4-20 mA (optional) | 18 | Level electrode NRG 21-.. NRG 26-21 |
| | | 19 | Level transmitter NRG 26-1, 4-20 mA,
with earthing point. |
| | | 20 | Central earthing point (CEP) in control cabinet |

In control cabinet: Wiring the operating & display unit

Back of equipment, position of connector

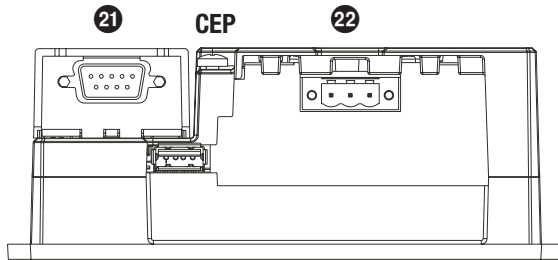


Fig. 9

Connection of supply voltage

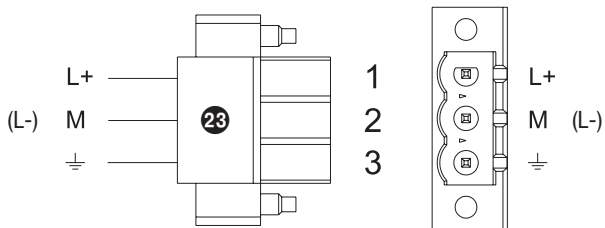


Fig. 10

Pin assignment for data line NRR 2-52, NRR 2-53 - URB 50




Fig. 11

Key

- ②1 D-SUB connector with 9 poles for data line
- ②2 Connector with 3 poles for supply voltage connection **24 V DC**
- ②3 Connection for supply voltage **24 V DC**, pin assignment


In control cabinet: Wiring the level controller / the operating & display unit

Connection of supply voltage

The level controller and the operating unit are supplied with 24 V DC each and provided with an internal (URB) or external fuse (NRR 2.5., semi-delay 0.5 A). Please use a safety power supply unit with safe electrical isolation. The power supply unit must be electrically isolated from dangerous contact voltages and must meet at least the requirements on double or reinforced isolation according to one of the following standards: DIN EN 50178, DIN EN 61010-1, DIN EN 60730-1 or DIN EN 60950.

After switching on the supply voltage and start-up of the equipment the LED of the level controller NRR 2-52, NRR 2-53 lights up green.

Connecting output contacts

Wire the upper terminal strip  (terminals 16-23) according to the desired and ordered switching functions. Provide an external slow-blow fuse 2.5 A for the output contacts.

When switching off inductive loads, voltage spikes are produced that may impair the operation of control and measuring systems. Connected inductive loads must be provided with suppressors such as RC combinations as specified by the manufacturer.

Connecting level electrode, level transmitter

To connect the equipment use screened multi-core control cable with a min. conductor size 0.5 mm², e. g. LiYCY 4 x 0.5 mm², max. length 100 m.

Wire terminal strip in accordance with the wiring diagram. **Fig. 7, 8**

Wire screen in accordance with the wiring diagram.

Make sure that connecting cables leading to the equipment are segregated and run separately from power cables.

Connection of data line for the level controller / operating & display unit

For connecting the equipment preconfigured control cable assemblies (with female connector) are available as add-on equipment. Wire terminal strip in accordance with wiring diagram. **Fig. 7, 8**

If you do not use the above-mentioned control cable assembly, use screened multi-core control cable, e. g. LiYCY 2 x 0.25 mm², conductor size 0.25 mm², max. length 30 m.

Wire the terminal strips according to the wiring diagram **Fig. 7, 8**. Wire the 9-pole D-SUB connector according to **Fig. 11**.

Connect the earthing point of the housing (URB 50) to the central earthing point in the control cabinet.

Connect the screen **only once** to the central earthing point (CEP) in the control cabinet. Make sure that connecting cables leading to the equipment are segregated and run separately from power cables.

Connecting the potentiometer (for indication of valve positions), connections IN .. / OUT / 4-20 mA

To connect the equipment use screened multi-core control cable with a min. conductor size 0.5 mm², e. g. LiYCY 2 x 0.5 mm², max. length: 100 m.

Please observe the max. load of 500 ohm for the outputs.

Wire terminal strip in accordance with the wiring diagram. **Fig. 7, 8**

Connect the screen **only once** to the central earthing point (CEP) in the control cabinet.

Make sure that connecting cables are segregated and run separately from power cables.



Attention

- Do not use unused terminals as support point terminals.

In the plant: Wiring level electrode / level transmitter

Connecting level electrode, level transmitter

The level controller NRR 2-52 / NRS 2-53 is designed to be used with level electrodes NRG 21-.. or NRG 26-21 as well as the level transmitter NRG 26-1.

To connect the equipment use screened multi-core control cable with a min. conductor size 0.5 mm², e. g. LiYCY 4 x 0.5 mm², max. length: 100 m.

Wire screen in accordance with the wiring diagram.



Attention

- To put the equipment into operation follow the instructions given in the installation & operating manuals for NRG 21-.., NRG 26-21 or NRG 26-1.
- Make sure that connecting cables leading to the equipment are segregated and run separately from power cables.
- The level transmitter must be separately connected to its own voltage supply.

Level controller: Factory settings

Level controller NRR 2-52, NRR 2-53

The level controller features the following factory set default values:

- De-energizing delay 3 sec., factory set
- Voltage input for connecting a level electrode type NRG 21-.. or type NRG 26-21.
- Measuring range = 100%
- MAX switchpoint = 80 % (NRR 2-53: 80 %, 60 %)
- MIN switchpoint = 20 % (NRR 2-53: 40 %, 20 %)
- Setpoint = 50 %
- Proportional band Pb = +/- 20 % of setpoint
- Integral action time Ti = 0 sec.
- Neutral band = +/- 5% of setpoint
- Valve travel time tt = 40 s
- Function: fill control

Level controller NRR 2-52, NRR 2-53: Code switch : All switches are set to OFF

Level controller: Changing factory settings



Danger

The upper terminal strip ② of the equipment is live during operation.

This presents the danger of electric shock!

Always cut off power supply to the equipment before mounting, removing or connecting the terminal strips!

Changing function and input for level electrode/transmitter

The input and the function are determined by the code switch ②4 setting.

To change the code switch setting proceed as follows:

- Switch off supply voltage.
- **Lower** terminal strip: Unscrew the left and right fixing screws. **Fig. 7, 8**
- Remove the terminal strip.

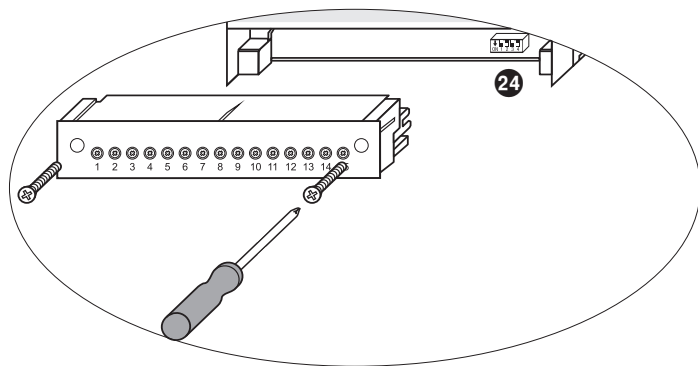


Fig. 12

After the new code switch settings have been established as new defaults:

- Attach lower terminal strip and fasten fixing screws.
- Apply supply voltage. Equipment is restarted.

Level controller: Changing factory settings - continued -

Changing function and input for level electrode/transmitter - continued -

If you want to change the input or the function, set the switches S2 and S3 of the code switch 24 as indicated in the following table **Fig. 12**.


Code switch 24		 Toggle switch, white	
Level controller NRR 2-52, NRR 2-53	S 2	S 3	
Input for connecting level electrode NRG 21-.. or NRG 26-21		OFF	
Input for connecting level transmitter NRGT 26-1 *		ON	
Fill control	OFF		
Discharge control	ON		

Fig. 13

grey = factory setting



Attention

* When connecting level transmitter NRGT 26-1 set the lower and the upper end of the measuring range **only** in the transmitter. For this purpose follow the instructions given in the installation & operating manual for the NRGT 26-1.

Do not change the code switch 24 settings of S1 and S4 ! verstellen!

Tools

- Screwdriver, size 3.5 x 100 mm, completely insulated according to VDE 0680-1.
- Screwdriver, size 2 x 100 mm, completely insulated according to VDE 0680-1.


Before putting the level control system into operation

Establishing measuring range

- 25 Lower end of measuring range, adjustable
- 26 Upper end of measuring range, adjustable
- 27 Measuring range [mm] = xxx %
- 28 Inactive area
- 29 Max. length of installation at 238 °C

Adjust the lower and upper end of the measuring range for level control. The resulting measuring range 27 is the active control range.

Please calculate the percentage value of the measuring range.

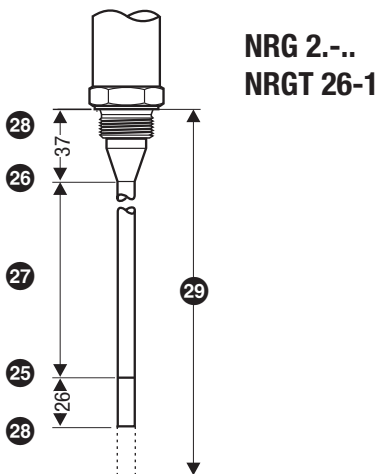

NRG 2..
NRGT 26-1




Attention

* When connecting level transmitter NRGT 26-1 set the lower and the upper end of the measuring range **only** in the transmitter.

Operating & display unit URB 50

User interface

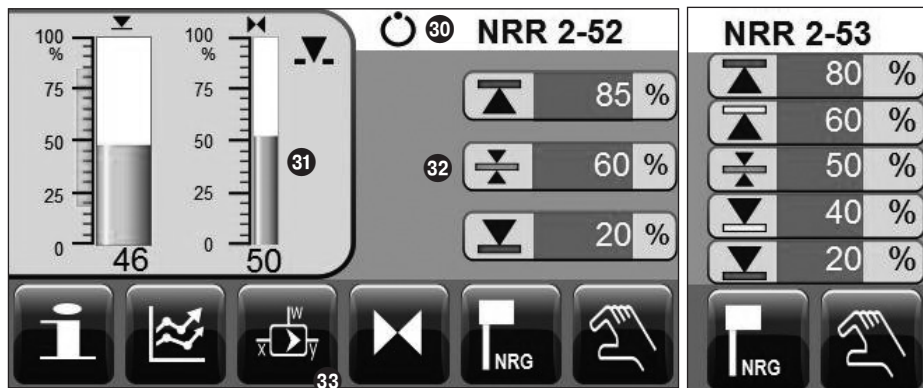

Start window

Key

- 30 Status bar
- 31 Display field
- 32 Input field
- 33 Button bar

Switch on supply voltage

Switch on the supply voltage for the level controller NRR 2-5.. and for the operating & display unit URB 50. The LED of the level controller first turns amber and then green. The operating & display unit shows the start window.

































Note

After approx. 2 minutes of user inactivity the display brightness automatically dims.



























If you call up another screen display from the start window and you do not make an entry, the system automatically returns to the start window after approx. 5 minutes (time out).

Explanation of icons

Icon	Description	Icon	Description
	MAX switchpoint		MAX switchpoint 2 (NRR 2-53)
	MIN switchpoint		MIN switchpoint 2 (NRR 2-53)
	Setpoint		Level
	Allowance made for influence of difference (steam flowrate - feedwater flowrate) on liquid level		Position of the control valve
	Control valve is motored into OPEN position		Control valve is motored into CLOSED position
	Go to parameter setting window for level electrode. This button is not available if a level transmitter is connected.		Calibration of upper end of level measuring range and valve CLOSED (indication of valve position via potentiometer)
	Calibration of end of level measuring range		
	Go to parameter setting window for control valve. This button is only available for the level controller NRR 2-52.		Calibration of valve OPEN (indication of valve position via potentiometer)
	Go to parameter setting window for controller		Proportional band, adjustable between 10 and 150 %, based on the setpoint,
	Integral action time: adjustable between 0 and 120 sec.		Neutral zone (dead band), adjustable between + / - 0 and 5%, based on the setpoint,
	Valve travel time: adjustable between 10 and 600 sec.		
	Go to parameter setting window for 3-element controller		Feedwater flowrate
			Steam flowrate
	Go to parameter setting window for analogue signal inputs 4-20 mA.		Go to trend log window.
	Move trend log window 1 hr forward		Move trend log window 1 hr backwards
	Zoom out of trend curve (decreases magnification)		Get information
	Zoom in on trend curve (increases magnification)		


Operating & display unit URB 50 - continued -

Explanation of icons - continued -


Icon	Description	Icon	Description
	Fill control activated		Discharge control activated
	Log in		Log out
	Relay test of MAX switchpoint		Relay test of MIN switchpoint
	Logged in		Logged out
	Enter new password		New password
	Deactivate password handling		Password
	Confirm password		Scroll back
	Switch to manual operating mode		Switch to automatic operating mode
	Hand slider for control valve		Time and date setting
	Alarm message / Go to alarm list		Go to alarm list
	Alarm message received		Alarm message gone
	Go to first line in alarm list		Scroll down alarm list
	Go to next active alarm		Scroll up alarm list

Commissioning procedure

Adjusting the MIN/MAX switchpoints and setpoint

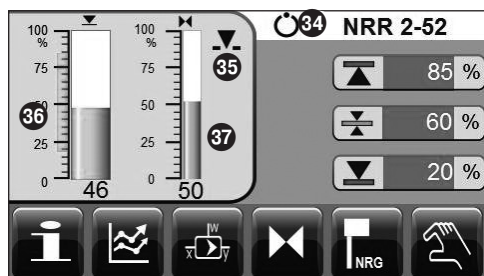


Screen display 1

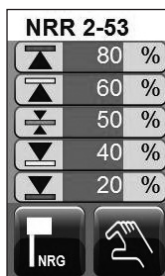

For each setpoint press the green button. Use the on-screen numberpad

Screen display 2 to enter the desired percentage value.

Numberpad

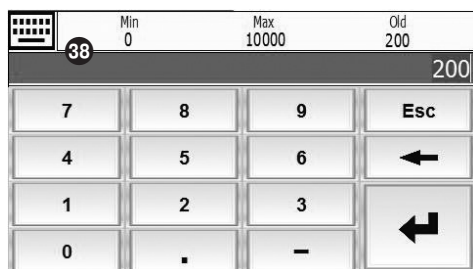

Screen display 2

The green buttons in the following windows indicate that user input is possible. When you press on these green buttons a numberpad appears and you can enter the desired values and parameter settings.

The bar (38) shows the old value and the limit range.

To undo any incorrect data input press the **Backspace** key.

If you do not want to enter data press the **Esc** key. The start window re-appears.


To confirm your data input press the **Enter** key. The start window re-appears again.

Key


- 34 Status indication: automatic operation
- 35 Control valve motored to OPEN position
- 36 Bar chart indication of liquid level, actual value [in %]
- 37 Bar chart indication of control valve position [in %]
- 38 Bar showing the old value and the limit range

Establishing measuring range for level electrode NRG 2-..

Press button  to open the parameter setting window for the level electrode.

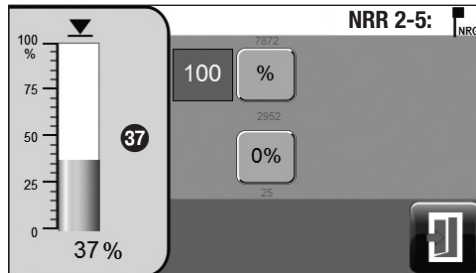


Screen display 3

Press button  to go back to the start window.

Only for level electrode NRG 2-.. :
Adjusting lower and upper end of measuring range. The sequence is irrelevant.

Calibrating lower end of measuring range:


Lower water level until the lower end of the measuring range  is reached.

Press button "0 %".

(actual-value output = 4 mA)



Calibrating upper end of measuring range:

Fill tank until the upper end of the measuring range  is reached.

Press the green button and use the on-screen numberpad to enter 100.

The press button "%".

(actual-value output = 20 mA)



OR

Calibrating upper end of measuring range:

Raise water level until at least 25 % of the measuring range is reached. Press the green button and use the on-screen numberpad to enter for instance "25 %". Press button "%" and the value is interpolated to 100 % of the measuring range.

(actual-value output = 20 mA)






Note

Even though you can calibrate the measuring range in any order, do not forget to **calibrate the lower end of the measuring range!**


Setting the control parameters

Press button  to open the parameter setting window for the controller.

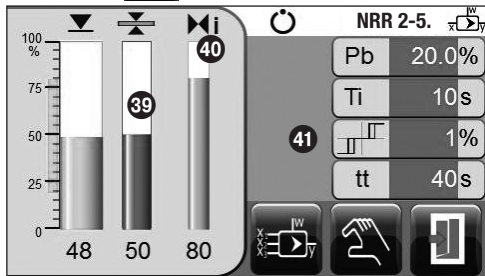

For each parameter setting press the green button. Use the on-screen numberpad to enter the desired value.

Press button  to scroll back or

press button  to go to the parameter setting window of the 3-element control.

Screen display 4

Additional information on control parameter settings

Parameter		Deviation	Control valve
Proportional band Pb	larger	large remaining deviation	responds slowly
	smaller	small remaining deviation	responds quickly and may open/closes all the time
	Example	Measuring range 100% = 200 mm of sightglass Setpoint SP = 80 % of measuring range = 160 mm Proportional band Pb = +/- 20% of setpoint = +/- 16% = +/- 32 mm If the measuring range is 100% (200 mm) and the setpoint 80% (160 mm), the proportional band will be +/- 16% (+/- 32 mm) or within the range of 128 to 192 mm.	
Integral action time ti	larger	slow correction of deviations	responds slowly
	smaller	fast correction of deviations, control system may tend to overshoot	responds quickly
Neutral band 41	larger	time-delayed correction of deviations	will not respond until the deviation exceeds the neutral band
	smaller	fast correction of deviations	
Valve travel time tt (only NRR 2-52)			Adjust the valve travel time specified by the valve manufacturer.


Key

- 39** Bar chart indication of setpoint [in %]
- 40** Bar chart indication of manipulated variable Y [in %], relative to valve lift
- 41** Neutral zone (dead band)

Setting the control parameters for 3-element control (optional)

The buttons for setting the control parameters for 3-element control are only available if the level controller NRR 2-5.. was factory set as 3-element controller.


Press button  to open the parameter setting window for 3-element control.

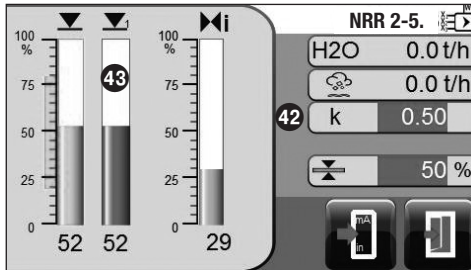

Screen display 5


To enter the evaluation factor press the green button. Use the on-screen numberpad to enter the desired value. The factor evaluates the influence of the difference (steam flowrate - feedwater flowrate) on the measured level signal.

Press button  to open the parameter setting window for analogue signal inputs 4-20 mA.

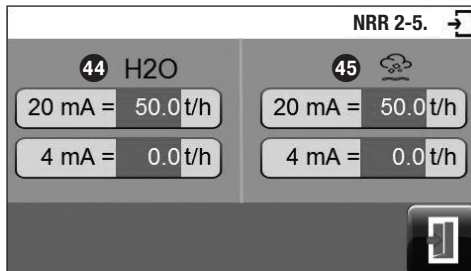

Screen display 6

For each flowrate setting press the green button. Use the on-screen numberpad to enter the desired value.

Press button  to go back to screen display 5.



Note


Controlled actual value = level - (steam flowrate - feedwater flowrate) x evaluation factor (only if steam flowrate - feedwater flowrate > 0)


Key

- 42** Evaluation factor
- 43** Controlled actual value, influence of difference (steam flowrate - feedwater flowrate) has been evaluated
- 44** Feedwater flowrate
- 45** Steam flowrate

Only NRR 2-52: Calibrating the potentiometer for indication of valve position

Press button  to open the parameter setting window for the control valve.

Press button  to switch to manual operating mode.

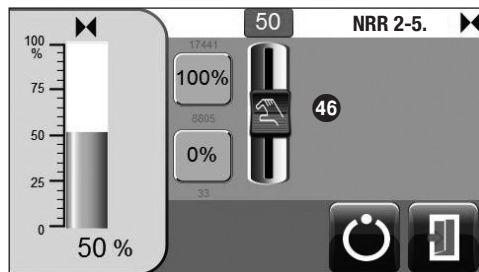

Calibration of "Valve CLOSED"(0%):
Move the hand slider downwards until "0" is indicated in the green button. Press the key "0 %".

0%

Calibration of "Valve OPEN"(100%):
Move the hand slider upwards until "100" is indicated in the green button. Press the key "100 %". Or press the green button and enter 100 in the numberpad.

100%

Screen display 7


Switch back to automatic operating mode and scroll back.



Operation

Manual actuation of control valve

Press button  to switch to manual operating mode.

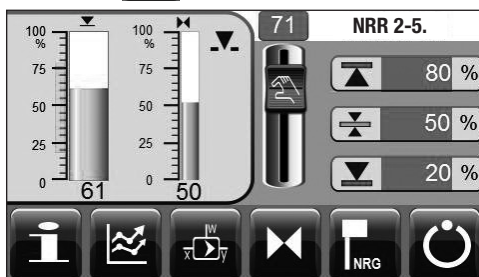

Use the hand slider to change the position of the control valve. The green button indicates the valve opening in %. Or press the green button and enter the desired valve opening in % in the numberpad.

Screen display 8


Switch back to automatic operation.



Trending




Screen display 1


Press button  to open the trend log window.





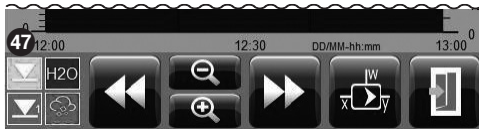



Screen display 9



Screen display 10







Press button  to go back to screen display 4.

Press button	
	to move 1 hour back in the trend log window
	to zoom out of trend curve (magnification decreases)
	to zoom in on the trend curve (magnification increases)
	to move 1 hour forward in the trend log window
	to go to the trend log window for 3-element control
	to go back to the trend log window for the control system (screen display 9)

Key

46 Hand slider for control valve

47 Designation of trend curves


	Level, green curve
	Position of control valve, grey curve
	Setpoint, dark green curve
	Alarm message, red curves
H2O	Feedwater flowrate, blue curve
	Level, corrected, dark green curve
	Steam flowrate, red curve

Testing MIN/MAX alarm, entering date and time



Screen display 1

Press button to open the information window

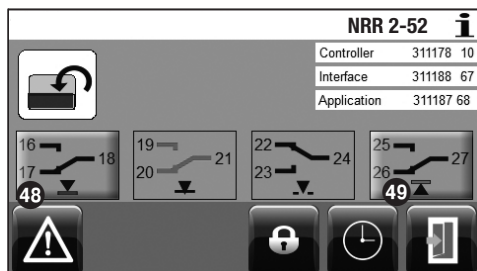

Testing MIN alarm


Press and hold down button for at least 3 sec. After the de-energizing delay the output contact 17-18 opens and the respective contact icon turns red.

Testing MAX alarm

Press and hold down button for at least 3 sec. After the de-energizing delay the output contact 26-27 opens and the respective contact icon turns red.

Screen display 11

Press button to open the time/date window.

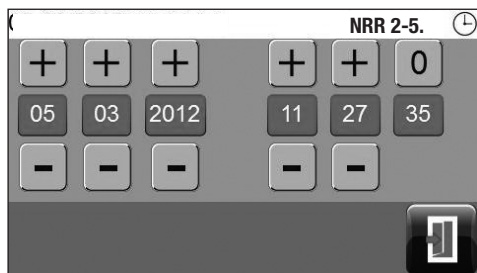

Press the green button and use the on-screen numeric keypad to enter the day, month, year and hours, minutes and seconds. To change the date and time use the +/- keys.

Screen display 12

Press button to go back to screen display 11.

Setting up a password and logging in



You can allocate a password in order to protect the operating & display unit from unauthorized access and operation.

Screen display 11

To log out press button




The following button(s) appear(s):



Press again button


Screen display 13 appears.

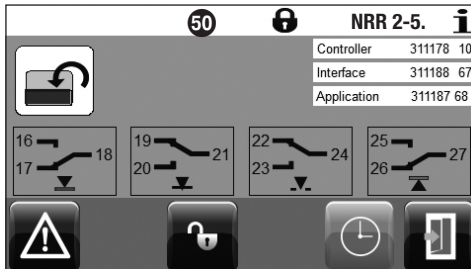


Screen display 13

Press button

Screen display 14 appears.

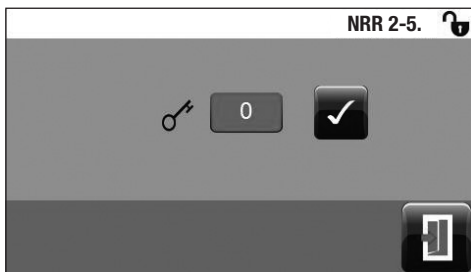




Press the green button and use the on-screen numberpad to enter "0" during first commissioning.


Press button  to confirm the password input. Screen display 15 appears.

Screen display 14




Key


-  Test button for MIN alarm
-  Test button for MAX alarm
-  Log out symbol in status bar

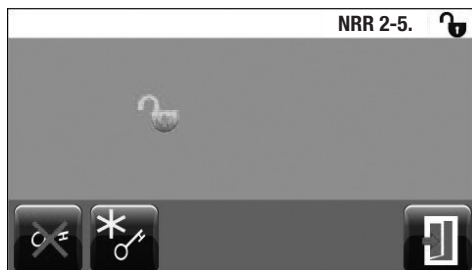Setting up a password and logging in - continued -





Screen display 15

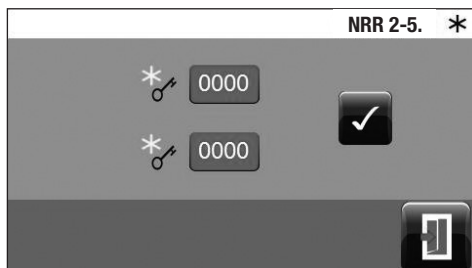Press button	
	to go to screen display 16 where you can enter a new password.
	to deactivate the password handling.
	to go back to the start window. All buttons and input options are now available



Screen display 16

Press the green button and use the on-screen numberpad to enter your new password twice.	
Press button 	to confirm the password and go back to screen display 15.
Press button 	to go back to screen display 15

Log out



After having changed the parameters and settings you can log out again.


To log out press button



The following button(s) appear(s).



Press again button Screen display 17 appears.

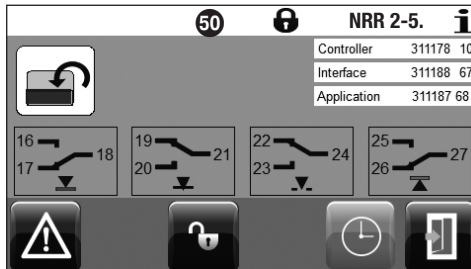


Press button  to go back to the start window.

All buttons and input options are now unavailable. The symbol "Logged out" appears in the status bar.

Screen display 17


Alarm & malfunction list

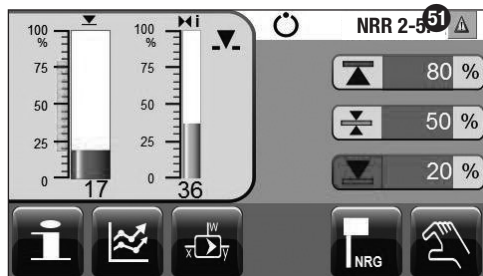

Example:
 Value below MIN switchpoint .
 The warning triangle **51** and the change of colour indicate that there is an alarm message.
 Press the button with the warning triangle **51** to view the alarm list (screen display 23).

Screen display 18

Or press button to open the information window

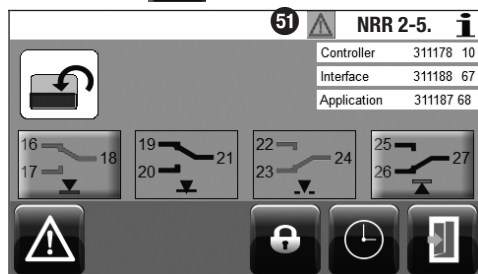

Press button to go back to the start window.

Screen display 19

Press button to go to the alarm list.



The active alarm or malfunction is highlighted in red. Press button

	to call up the next active message.
	to scroll forward in the alarm list (also possible by means of hand slider)
	to go to the first line.
	to go back to the start window.

Screen display 20

Key

- 51** Malfunction or alarm message received
- 52** Hand slider

Error, alarm and warning messages

Indication, diagnosis and remedy



Attention


Before carrying out the fault diagnosis please check:

Supply voltage:

Is the equipment supplied with the voltage specified on the name plate?

Wiring:

Is the wiring in accordance with the wiring diagram?

Alarm list / window		
	Status / error	Remedy
	Communication NRR/URB disrupted	Check electrical connection. Switch supply voltage off and on again to re-start the equipment.
A.001	MAX switchpoint exceeded	
A.002	Value below MIN switchpoint	
E.005	Level electrode defective, measuring voltage < 0.5 VDC	Check level electrode and, if necessary, replace it. Check electrical connection.
	Level transmitter defective, measuring current < 4 mA	Check level transmitter and, if necessary, replace it. Check electrical connection.
E.006	Level electrode defective, measuring voltage > 7 VDC	Check level electrode and, if necessary, replace it. Check electrical connection.
	Level transmitter defective, measuring current > 20 mA	Check level transmitter and, if necessary, replace it. Check electrical connection.
E.101	If control valve is equipped with a potentiometer: Calibration values 0 and 100 % have been reversed.	Re-calibrate the potentiometer in the control valve.
E.102	Beginning and end of measuring range have been reversed.	Re-adjust the measuring range.
E.103	MIN switchpoint above MAX switchpoint	Re-adjust the switchpoints.
In the event of a malfunction (E. xxx) a MIN and MAX alarm will be triggered.		



Attention

- Please follow the instructions given in the installation & operating manual for the NRG 21-... , NRG 26-21 and NRG 26-1 for further fault finding and troubleshooting.



Note

If a malfunction occurs in the level controller, MIN and MAX alarms will be triggered and the equipment is restarted.

Should this happen over and over again, replace the equipment with a new one.

Further Notes

Action against high frequency interference

High frequency interference can occur for example as a result of out-of-phase switching operations. Should such interference occur and lead to sporadic failures, we recommend the following actions in order to suppress any interference.

- Provide inductive loads with RC combinations according to manufacturer's specification to ensure interference suppression.
- Make sure that all connecting cables leading to the level electrode or to the level transmitter are segregated and run separately from power cables.
- Increase the distance to sources of interference.
- Check the connection of the screen to the central earthing point (CEP) in the control cabinet.
- HF interference suppression by means of hinged-shell ferrite rings.

Decommissioning / replacing the level controller NRR 2-5

- Switch off supply voltage and **cut off power supply** to the equipment.
- Remove the lower and upper terminal strips. Unscrew the left and right fixing screws. **Fig. 12**
- Release the white fixing slide at the bottom of the equipment and take the equipment off the supporting rail.

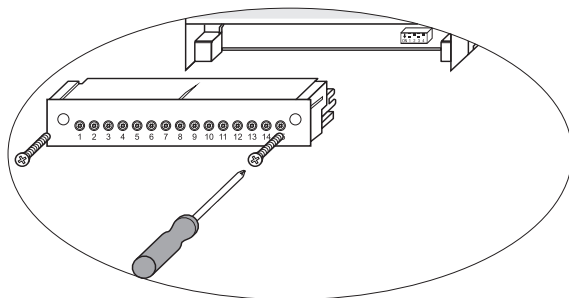


Fig. 12

Decommissioning / replacing the operating & display unit URB 50

- Switch off supply voltage and **cut off power supply** to the equipment.
- Unplug the connector **Fig. 10 and 11**.
- Unscrew screws **Fig. 5** and remove fixing elements..
- Push the equipment out of the control cabinet panel cut-out.

Disposal

For the disposal of the equipment observe the pertinent legal regulations concerning waste disposal.

If faults occur that are not listed above or cannot be corrected, please contact our service centre or authorized agency in your country.



GESTRA

Agencies all over the world:

www.gestra.de

Great Britain

Flowserve GB Limited

Abex Road

Newbury, Berkshire RG14 5EY

Tel. 0044 16 35 / 46 99 90

Fax 0044 16 35 / 3 60 34

E-Mail gestraukinfo@flowserve.com

Web www.flowserve.com

Singapore

Flowserve Pte. Ltd.

12 Tuas Avenue 20

Singapore 63882

Tel. 0065 / 68 79 89 00

Fax 0065 / 68 62 49 40

E-Mail fcd_gestra_singapore@flowserve.com

Web www.gestra.com

South Africa

Flowserve SA (Pty) Ltd.

Unit No. 1

Director Road

Spartan Extension 2

Kempton Park 1613

Tel. 0027 11 / 9 23 73 00

Fax 0027 11 / 9 74 64 20

E-Mail tvniekerk@flowserve.com

Web www.flowserve.com

USA

Flowserve GESTRA U.S.

2341 Ampere Drive

Louisville, KY 40299

Tel. 001 502 / 267-22 05

Fax 001 502 / 266-53 97

E-Mail fcd-gestra-usa@flowserve.com

GESTRA AG

P. O. Box 10 54 60, D-28054 Bremen, Germany

Münchener Str. 77, D-28215 Bremen, Germany

Tel. 0049 (0) 421 / 35 03-0

Fax 0049 (0) 421 / 35 03-393

E-mail gestra.ag@flowserve.com

Web www.gestra.com

